Instructions for Continued Airworthiness Gascolator STC. NO. SA01026SE

Document No.3200-3-1 Dated November 7, 2001

Rev.1, dated 5-25-2003

I.R.

Daily:

Drain gascolator before first flight each day.

100/Annual Inspections:

- 1. Turn off fuel
- 2. Remove safety device
- 3. Remove bowl and clean
- Check screen and clean if necessary
- 5. Check condition of "o" ring
- 6. Reinstall bowl
- 7. Reinstall safety device
- 8. Check for general security
- 9. Turn on fuel and check for leaks

Remote Drain Bowl

10. Remove cable from lever by pushing up spring between cable housing and lever and slipping cable out of slot in lever. Remove bowl and lever as a unit, inspect and reinstall on cover and safety. Reinstall cable through slot. Check operation of drain valve after fuel is turned on.